

Bushnell battery compartment repairs

We have had a few of our older Bushnell trophy cam and trophy cam HD cameras stop working and I've narrowed it down to the battery compartment warping in the heat causing the batteries to lose contact. In particular, batteries 3 and 6 no longer touch the positive terminal plate. So as a quick fix I have disassembled the battery compartment (5 screws) and wedged a ~1mm piece of plastic in behind the terminal to push it out into the compartment further. So far this is all that has been needed to revive 6 or 7 units. Hopefully the following images help to illustrate for anyone that needs to do a similar fix.



Battery 3 (and 6 butt) up against the plastic case and doesn't touch the positive terminal



Remove the battery compartment and wedge a thin piece of plastic behind the terminal.



Now battery 3 touches the positive metal terminal.